

INSTALLATION & CARE INSTRUCTIONS

AJPR50-2 - PRE-RINSE PRODUCT

AQUAJET
manufactured by **MECHLINE**


Thank you for purchasing your AquaJet product.

GENERAL ADVICE



Please follow these instructions carefully to ensure trouble free operation.


- Inspect the product for damage carefully before installation. No claims for damage can be accepted after installation.
- Ensure all pipework is flushed free of debris before installation.
- Installation must be in accordance with local authority regulations.
- We recommend a service valve is fitted to the hot & cold supplies.
- Ensure supply pipes are properly sized to avoid problems with flow rate, pressure loss or water hammer.
- We recommend the installation is protected with water filters, water-hammer arrestors and water pressure reducers as required.
- Do not install where there is the possibility of the water supplies freezing.
- Recommended minimum water pressure 1.5 Bar (22.5psi). Maximum water pressure 5 Bar (75psi).
- Maximum recommended water temperature 55°C (131°F).
- Leave this Manual with the operator after installation.

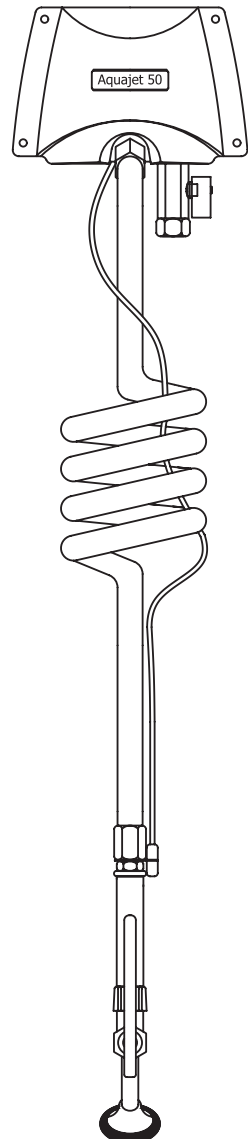

AJPR50 INSTALLATION


- 1.1 Remove the transit screws before installation.
- 1.2 Measure and mark any guides for mounting at a height of 1120mm from sink top to allow for an adequate air break gap, to prevent potential water back flow.

NOTE: *The pre-rinse hose coils will relax with use and allow the gun to hang slightly lower.*

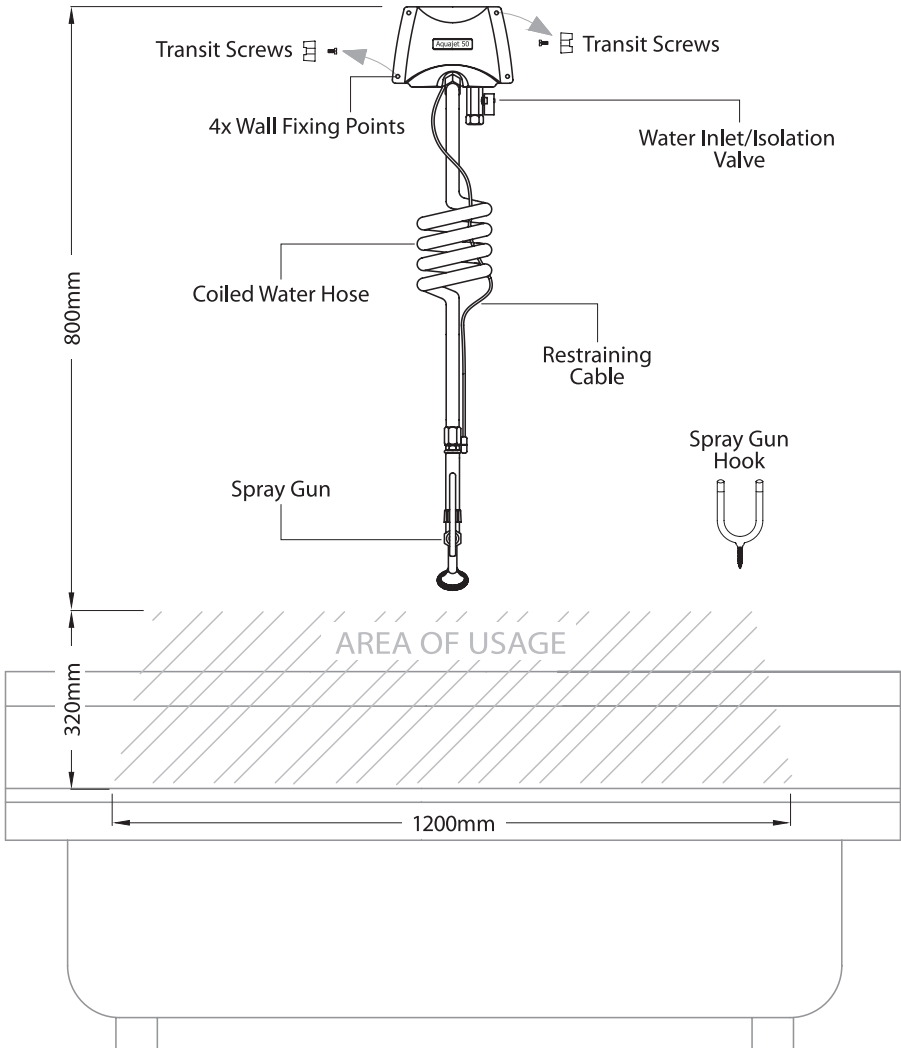


- 1.3 Securely fix the wall box to a solid wall surface using appropriate fixings. If possible, use the screw caps supplied.
- 1.4 Connect the water hose to the water inlet/isolation valve using a thread sealing compound or PTFE tape.

IMPORTANT: Do not twist valve during installation. To ensure a secure fit use a 24mm spanner to hold the valve in place when tightening hose to valve.

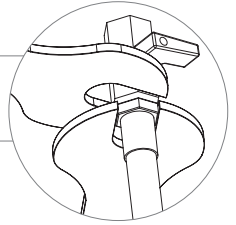


- 1.5 Test unit for water leaks.
- 1.6 The gun hook is used to store the gun out of the way when not in use. Install in an appropriate position that is convenient for the operator.

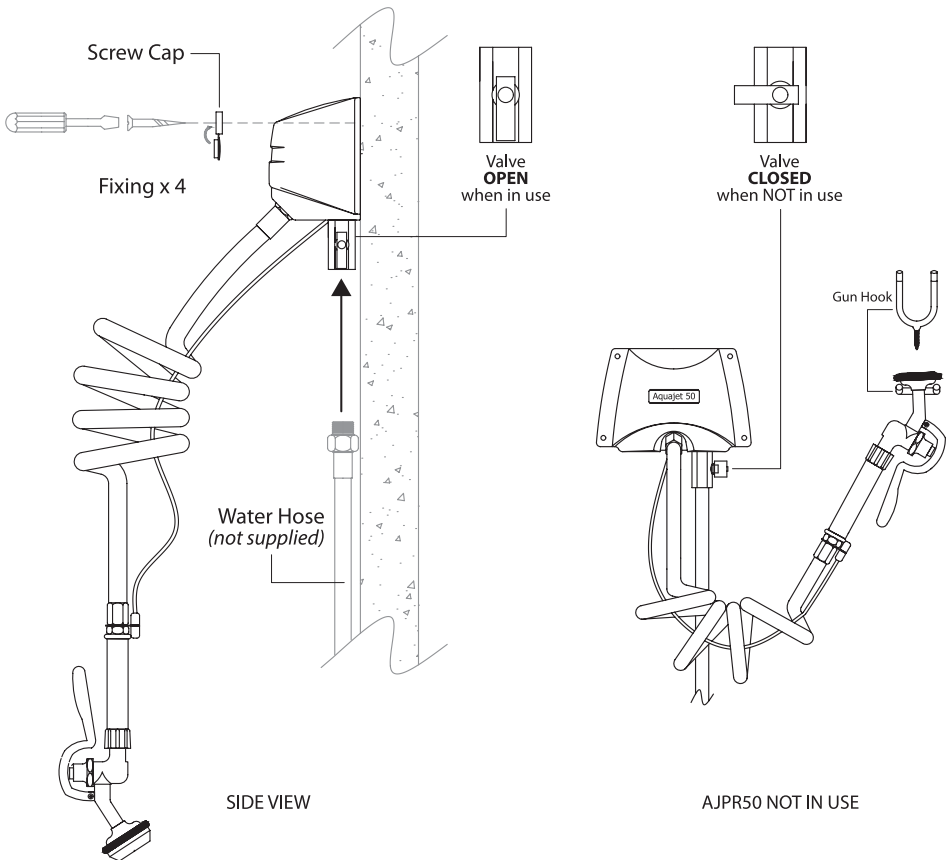


Cont'd...

MAINTENANCE & CLEANING

 Ensure isolation valve is always in the CLOSED position when unit is not in use.



Valve
OPEN

 

Valve
CLOSED

When cleaning the pre-rinse unit wipe over with clean water using a clean disposable cloth. Do not use abrasive, chlorine or acid-based cleaning products. Avoid contact with concentrated bleach. Do not over-extend or twist the coiled water hose or gun.

TECHNICAL ASSISTANCE

For technical help please call **01908 267713** or e-mail technical@mechline.com



MECHLINE DEVELOPMENTS LIMITED | Telephone: +44 (0)1908 261511 | Email: info@mechline.com | Web: www.mechline.com

©2018 All rights reserved. All material on these pages, including and without limitation text, logos, icons, photographs and all other artwork, is copyright material of Mechline Developments Ltd, unless otherwise stated. Commercial use of this material may only be made with the express, prior, written permission of Mechline. This includes material provided by any third party, including material obtained through links to other sites from Mechline's pages or its affiliates and commercial associates. Material and information included are correct at time of print. Intending buyers and users must satisfy themselves as to the suitability and safety of the products for their particular purposes and duties. Dimensions shown in mm unless otherwise stated. Product accreditation may not apply to all products in the relevant range. Please contact Mechline to confirm. Unless otherwise stated, all products carry a warranty of twelve (12) months against manufacturing defect or workmanship on parts with no inclusion for labour or site attendance.